



PLANTER ATTACHMENT GUIDE

This guide was compiled with current specifications obtained from U.S. planter manufacturers. **To ensure proper application for your specific planter setup**, you are encouraged to call our sales office (270-265-5817) for assistance.

You may add a Z to any part number to replace Spading Wheels with Razor Wheels

Dual UMO Fertilizer Openers are available for most planters—Call for details

Martin Row Cleaners require the following dimensions from the face plate of planter unit:

| Floating Models | Distance Needed from Face Plate |
|--------------------------------|--|
| ACCR1360 | 14" |
| ACCR1345 | 16" |
| BA1345 | 19 1/2" |
| BA1360 | 19" |
| BDC1360 & BKC1360 | 22" |
| BA/UMO1360 | 25" |
| BA/DUMO1360 | 30" |
| BCIH1360 | 22" |
| Rigid Pin-Adjust Models | |
| B1332 | 9" |
| B1532 | 10" |
| B1320 | 12 1/2" |

Planter Model JD 1710 Vertical Fold

| | Row Cleaner & Mount | Fertilizer Opener | Closing Wheels | 2nd Stage Closing |
|--|--|---|---|---|
| Standard parallel arms, w/o no-till coulters, w/o fertilizer openers | ACCR1360 ACCR1345 BA1360 BA1345 B1332/772 *B1532/772 *Note: Will not work next to wheel modules | UMO-150 Requires UMO-MTJ mount BA/UMO1345 BA/UMO1360 BA/DUMO1345 BA/DUMO1360 | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumblcr |
| Standard parallel arms, with no-till coulters, w/o fertilizer openers | BDC1360 | Will not work with coulter | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumblcr |
| Standard parallel arms, w/o no-till coulters, with frame mounted fertilizer openers | ACCR1345 ACCR1360 BA1345 BA1360 B1332/772 *B1532/772 *Note: Will not work next to wheel modules | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumblcr |
| Standard parallel arms, with no-till coulters, with frame mounted fertilizer openers | No row cleaner will work | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumblcr |
| Extended parallel arms, w/o no-till coulters, w/o fertilizer openers | ACCR1360 ACCR1360 BA1360 BA1345 B1332/772 *B1532/772 *Note: Will not work next to wheel modules | UMO-150 Requires UMO-MTJ mount BA/UMO1360 BA/UMO1345 BADUMO1360 BADUMO1345 | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumblcr |
| Extended parallel arms, with no-till coulters, w/o fertilizer openers | BDC1360 | Will not work with coulter | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumblcr |
| Extended parallel arms, w/o no-till coulters, with frame mounted fertilizer openers | ACCR1360 ACCR1345 BA1360 BA1345 B1332/772 *B1532/772 *Note: Will not work next to wheel modules | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumblcr |

Planter Model **JD 1710 Vertical Fold continued...**

| | Row Cleaner & Mount | Fertilizer Opener | Closing Wheels | 2nd Stage Closing |
|--|-----------------------------------|--------------------------|---|---|
| Extended parallel arms, with no-till coulters, with frame mounted fertilizer openers | BDC1360 | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumblcr |
| Extended parallel arms, with unit mounted double disk fertilizer openers | BDD1360 | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumblcr |
| Extended parallel arms, with unit mounted single disk fertilizer injector coulters | C125 With C125MTXL-XP Mount | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumblcr |

Planter Model JD 1720 Stack Fold

| | Row Cleaner & Mount | Fertilizer Opener | Closing Wheels | 2nd Stage Closing |
|--|--|---|---|---|
| Standard parallel arms, w/o no-till coulters, w/o fertilizer openers | ACCR1345 ACCR1360 BA1345 BA1360 B1332/772 *B1532/772 *Note: Will not work next to wheel modules | UMO-150 Requires UMO-MTJ mount BA/UMO1345 BA/UMO1360 BA/DUMO1345 BA/DUMO1360 | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Standard parallel arms, with no-till coulters, w/o fertilizer openers | BDC1360 | Will not work with coulters | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Standard parallel arms, w/o no-till coulters, with frame mounted fertilizer openers | ACCR1345 ACCR1360 BA1345 BA1360 B1332/772 *B1532/772 *Note: Will not work next to wheel modules | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Standard parallel arms, with no-till coulters, with frame mounted fertilizer openers | No row cleaner will work | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Extended parallel arms, w/o no-till coulters, w/o fertilizer openers | ACCR1345 ACCR1360 BA1345 BA1360 *B1532/772 *Note: Will not work next to wheel modules | UMO-150 Requires UMO-MTJ mount BA/UMO1345 BA/UMO1360 BA/DUMO1345 BA/DUMO1360 | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Extended parallel arms, with no-till coulters, w/o fertilizer openers | BDC1360 | Will not work with coulters | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Extended parallel arms, w/o no-till coulters, with frame mounted fertilizer openers | ACCR1345 ACCR1360 BA1345 BA1360 B1332/772 *B1532/772 *Note: Will not work next to wheel modules | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |

Planter Model **JD 1720 Stack Fold continued...**

| | Row Cleaner & Mount | Fertilizer Opener | Closing Wheels | 2nd Stage Closing |
|--|-----------------------------------|--------------------------|---|---|
| Extended parallel arms, with no-till coulters, with frame mounted fertilizer openers | BDC1360 | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Extended parallel arms, with unit mounted double disk fertilizer openers | BDD1360 | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Extended parallel arms, with unit mounted single disk fertilizer injector coulters | C125 With C125MTXL-XP mount | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |

Planter Model **JD 1750**

| | Row Cleaner & Mount | Fertilizer Opener | Closing Wheels | 2nd Stage Closing |
|--|---|--|---|---|
| Standard parallel arms, w/o no-till coulters, w/o fertilizer openers | ACCR1345 ACCR1360 *BA1345 *BA1360 *If drive shaft is under frame, floating row cleaners will require SG-01 shaft guard B1332/772 **B1532/772 **Will not work next to wheel modules | UMO-150 Requires UMO-MTJ mount *BA/UMO1345 *BA/UMO1360 *BA/DUMO1345 *BA/DUMO1360 *If drive shaft is under frame, floating row cleaners will require SG-01 shaft guard | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Standard parallel arms, with no-till coulters, w/o fertilizer openers | *BDC1360 | Will not work with coulters | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Standard parallel arms, w/o no-till coulters, with frame mounted fertilizer openers | ACCR1345 ACCR1360 *BA1345 *BA1360 *If drive shaft is under frame, floating row cleaners will require SG-01 shaft guard B1332/772 **B1532/772 **Will not work next to wheel modules | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Standard parallel arms, with no-till coulters, with frame mounted fertilizer openers | No row cleaner will work | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Extended parallel arms, w/o no-till coulters, w/o fertilizer openers | ACCR1345 ACCR1360 *BA1345 *BA1360 *If drive shaft is under frame, floating row cleaners will require SG-01 shaft guard B1332/772 **B1532/772 **Will not work next to wheel modules | UMO-150 Requires UMO-MTJ mount *BA/UMO1345 *BA/UMO1360 *BA/DUMO1345 *BA/DUMO1360 *If drive shaft is under frame, floating row cleaners will require SG-01 shaft guard | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Extended parallel arms, with no-till coulters, w/o fertilizer openers | *BDC1360 *If drive shaft is under frame, floating row cleaners will require SG-01 shaft guard | Will not work with coulters | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |

Planter Model JD 1750 continued...

| | Row Cleaner & Mount | Fertilizer Opener | Closing Wheels | 2nd Stage Closing |
|--|---|--------------------------|---|--|
| Extended parallel arms w/o no-till coulters, with frame mounted fertilizer openers | ACCR1345 ACCR1360 *BA1345 *BA1360 *If drive shaft is under frame, floating row cleaners will require SG-01 shaft guard B1332/772 **B1532/772 **Will not work next to wheel modules | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumblers |
| Extended parallel arms, with no-till coulters, with frame mounted fertilizer openers | *BDC1360 *If drive shaft is under frame, floating row cleaners will require SG-01 shaft guard | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumblers |
| Extended parallel arms, with unit mounted double disk fertilizer openers | *BDD1360 *If drive shaft is under frame, floating row cleaners will require SG-01 shaft guard | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumblers |
| Extended parallel arms, with unit mounted single disk fertilizer injector coulters | *C125 With C125MTXL-XP Mount *If drive shaft is under frame, floating row cleaners will require SG-01 shaft guard | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumblers |

Planter Model JD 1770/1775

| | Row Cleaner & Mount | Fertilizer Opener | Closing Wheels | 2nd Stage Closing |
|--|--|---|---|---|
| Standard parallel arms, w/o no-till coulters, w/o fertilizer openers | ACCR1345 ACCR1360 BA1345 BA1360 B1332/772 *B1532/772 *Note: Will not work next to wheel modules | UMO-150 Requires UMO-MTJ mount BA/UMO1345 BA/UMO1360 BA/DUMO1345 BA/DUMO1360 | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Standard parallel arms, with no-till coulters, w/o fertilizer openers | BDC1360 | Will not work with coulter | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Standard parallel arms, w/o no-till coulters, with frame mounted fertilizer openers | ACCR1345 ACCR1360 BA1345 BA1360 B1332/772 *B1532/772 *Note: Will not work next to wheel modules | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Standard parallel arms, with no-till coulters, with frame mounted fertilizer openers | No row cleaner will work | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Extended parallel arms, w/o no-till coulters, w/o fertilizer openers | ACCR1345 ACCR1360 BA1345 BA1360 B1332/772 *B1532/772 *Note: Will not work next to wheel modules | UMO-150 Requires UMO-MTJ mount BA/UMO1345 BA/UMO1360 BA/DUMO1345 BA/DUMO1360 | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Extended parallel arms, with no-till coulters, w/o fertilizer openers | BDC1360 | Will not work with coulter | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Extended parallel arms, w/o no-till coulters, with frame mounted fertilizer openers | ACCR1345 ACCR1360 BA1345 BA1360 B1332/772 *B1532/772 *Note: Will not work next to wheel modules | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |

Planter Model **JD 1770/1775 continued...**

| | Row Cleaner & Mount | Fertilizer Opener | Closing Wheels | 2nd Stage Closing |
|--|-----------------------------------|--------------------------|---|---|
| Extended parallel arms, with no-till coulters, with frame mounted fertilizer openers | BDC1360 | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Extended parallel arms, with unit mounted double disk fertilizer openers | BDD1360 | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Extended parallel arms, with unit mounted single disk fertilizer injector coulters | C125 With C125MTXL-XP mount | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |

Planter Model **JD 1760 Folding**

| | Row Cleaner & Mount | Fertilizer Opener | Closing Wheels | 2nd Stage Closing |
|--|--|---|---|---|
| Standard parallel arms, w/o no-till coulters, w/o fertilizer openers | ACCR1345 ACCR1360 BA1345 BA1360 B1332/772 *B1532/772 *Note: Will not work next to wheel modules | UMO-150 Requires UMO-MTJ mount BA/UMO1345 BA/UMO1360 BA/DUMO1345 BA/DUMO1360 | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Standard parallel arms, with no-till coulters, w/o fertilizer openers | BDC1360 | Will not work with coulters | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Standard parallel arms, w/o no-till coulters, with frame mounted fertilizer openers | ACCR1345 ACCR1360 BA1345 BA1360 B1332/772 *B1532/772 | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Standard parallel arms, with no-till coulters, with frame mounted fertilizer openers | No row cleaner will work | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Extended parallel arms, w/o no-till coulters, w/o fertilizer openers | ACCR1345 ACCR1360 BA1345 BA1360 B1332/772 *B1532/772 *Note: Will not work next to wheel modules | UMO-150 Requires UMO-MTJ mount BA/UMO1345 BA/UMO1360 BA/DUMO1345 BA/DUMO1360 | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Extended parallel arms, with no-till coulters, w/o fertilizer openers | BDC1360 | Will not work with coulters | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Extended parallel arms, w/o no-till coulters, with frame mounted fertilizer openers | ACCR1345 ACCR1360 BA1345 BA1360 B1332/772 *B1532/772 *Note: Will not work next to wheel modules | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |

Planter Model **JD 1760 Folding continued...**

| | Row Cleaner & Mount | Fertilizer Opener | Closing Wheels | 2nd Stage Closing |
|--|-----------------------------------|--------------------------|---|---|
| Extended parallel arms, with no-till coulters, with frame mounted fertilizer openers | BDC1360 | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Extended parallel arms, with unit mounted double disk fertilizer openers | BDD1360 | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Extended parallel arms, with unit mounted single disk fertilizer injector coulters | C125 With C125MTXL-XP mount | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |

Planter Model **JD 1780**

| | Row Cleaner & Mount | Fertilizer Opener | Closing Wheels | 2nd Stage Closing |
|--|--|---|---|---|
| Standard parallel arms, w/o no-till coulters, w/o fertilizer openers | ACCR1345 ACCR1360 BA1345 BA1360 B1332/772 *B1532/772 *Will not work next to wheel modules | UMO-150 Requires UMO-MTJ mount **BA/UMO1345 **BA/UMO1360 **BA/DUMO1345 **BA/DUMO1360 **Will not work behind transport tire | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Standard parallel arms, with no-till coulters, w/o fertilizer openers | **BDC1360 **Will not work behind transport tire | Will not work with coulters | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Standard parallel arms, w/o no-till coulters, with frame mounted fertilizer openers | ACCR1345 ACCR1360 BA1345 BA1360 B1332/772 *B1532/772 *Will not work next to wheel modules | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Standard parallel arms, with no-till coulters, with frame mounted fertilizer openers | No row cleaner will work | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Extended parallel arms, w/o no-till coulters, w/o fertilizer openers | ACCR1345 ACCR1360 BA1345 BA1360 B1332/772 *B1532/772 *Will not work next to wheel modules | UMO-150 Requires UMO-MTJ mount BA/UMO1345 BA/UMO1360 BA/DUMO1345 BA/DUMO1360 | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Extended parallel arms, with no-till coulters, w/o fertilizer openers | BDC1360 | Will not work with coulters | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Extended parallel arms, w/o no-till coulters, with frame mounted fertilizer openers | ACCR1345 ACCR1360 BA1345 BA1360 B1332/772 *B1532/772 *Will not work next to wheel modules | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Extended parallel arms, with no-till coulters, with frame mounted fertilizer openers | BDC1360 | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |

| Planter Model JD 1790/1795 Front Rows | | | | |
|--|--|---|---|--|
| | Row Cleaner & Mount | Fertilizer Opener | Closing Wheels | 2nd Stage Closing |
| Standard parallel arms, w/o no-till coulters, w/o fertilizer openers | ACCR1345 ACCR1360 BA1345 BA1360 B1332/772 *B1532/772 *Will not work next to wheel modules | UMO-150 Requires UMO-MTJ mount BA/UMO1345 BA/UMO1360 BA/DUMO1345 BA/DUMO1360 | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumblers |
| Standard parallel arms, with no-till coulters, w/o fertilizer openers | BDC1360 | Will not work with coulters | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumblers |
| Standard parallel arms, w/o no-till coulters, with frame mounted fertilizer openers | ACCR1345 ACCR1360 BA1345 BA1360 B1332/772 *B1532/772 *Will not work next to wheel modules | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumblers |
| Standard parallel arms, with no-till coulters, with frame mounted fertilizer openers | No row cleaner will work | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumblers |
| Extended parallel arms, w/o no-till coulters, w/o fertilizer openers | ACCR1345 ACCR1360 BA1345 BA1360 B1332/772 *B1532/772 *Will not work next to wheel modules | UMO-150 Requires UMO-MTJ mount BA/UMO1345 BA/UMO1360 BA/DUMO1345 BA/DUMO1360 | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumblers |
| Extended parallel arms, with no-till coulters, w/o fertilizer openers | BDC1360 | Will not work with coulters | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumblers |
| Extended parallel arms, w/o no-till coulters, with frame mounted fertilizer openers | ACCR1345 ACCR1360 BA1345 BA1360 B1332/772 *B1532/772 *Will not work next to wheel modules | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumblers |

| Planter Model JD 1790/1795 Front Rows continued... | | | | |
|--|--------------------------------|-------------------|---|---|
| | Row Cleaner & Mount | Fertilizer Opener | Closing Wheels | 2nd Stage Closing |
| Extended parallel arms, with no-till coulters, with frame mounted fertilizer openers | BDC1360 | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Extended parallel arms, with unit mounted double disk fertilizer openers | BDD1360 | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Extended parallel arms, with unit mounted single disk fertilizer injector coulters | C125 With C125MTXL-XP mount | Does not apply | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |

| Planter Model JD 1790/1795 Rear Rows | | | | |
|---|--|---|---|---|
| | Row Cleaner & Mount | Fertilizer Opener | Closing Wheels | 2nd Stage Closing |
| Standard parallel arms , w/o no-till coulters | ACCR1345 ACCR1360 BA1345 BA1360 B1332/772 *B1532/772 *Will not work next to wheel modules | UMO-150 Requires UMO-MTJ mount **BA/UMO1345 **BA/UMO1360 **BA/DUMO1345 **BA/DUMO1360 **Planter must be equipped with double crop package | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Standard parallel arms, with no-till coulters | **BDC1360 **Planter must be equipped with double crop package | Will not work with coulters | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Extended parallel arms , w/o no-till coulters | ACCR1345 ACCR1360 BA1345 BA1360 B1332/772 *B1532/772 *Will not work next to wheel modules | UMO-150 Requires UMO-MTJ mount BA/UMO1345 BA/UMO1360 BA/DUMO1345 BA/DUMO1360 | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Extended parallel arms, with no-till coulters | BDC1360 | Will not work with coulters | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |

Planter Model **JD DB BAUER BUILT BAR**

| | Row Cleaner & Mount | Fertilizer Opener | Closing Wheels | 2nd Stage Closing |
|---|--|--|---|---|
| Standard parallel arms, w/o no-till coulters | ACCR1360 ACCR1345 *BA1345 *BA1360 *Planters with optional transport tires may experience interference B1332/772 B1532/772 | UMO-150 Requires UMO-MTJ mount **BA/UMO1345 **BA/UMO1360 **BA/DUMO1345 **BA/DUMO1360 **Will not work behind transport tires | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Standard parallel arms, with no-till coulters | **BDC1360 **Will not work behind transport tires | Will not work with coulter | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Extended parallel arms, w/o no-till coulters | ACCR1360 ACCR1345 *BA1345 *BA1360 *Planters with optional transport tires may experience interference B1332/772 B1532/772 | UMO-150 Requires UMO-MTJ mount **BA/UMO1345 **BA/UMO1360 **BA/DUMO1345 **BA/DUMO1360 **Will not work behind transport tires | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| Extended parallel arms, with no-till coulters | BDC1360 | Will not work with coulter | BSCW1344 BSCW1544 BSCW1444C 800711 | 900296 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |

Planter Models **JD 7000/7200**

| | Row Cleaner & Mount | Fertilizer Opener | Closing Wheels | 2nd Stage Closing |
|--|--|---|-----------------------------------|--------------------------|
| 7000 & 7100 w/o coulter | ACCR1345 ACCR1360 BA1345 BA1360 Note: If drive shaft is under planter frame, floating row cleaners will require SG-01 shaft guard B1332/772 B1532/772 | UMO-150 with UMO-MTA mount BA/UMO1345 BA/UMO1360 BA/DUMO1345 BA/DUMO1360 | BSCW1341 BSCW1541 | DCK-01 |
| 7000 & 7100 with unit mounted no-till coulter | C125R | Will not work with coulter | BSCW1341 BSCW1541 | DCK-01 |
| 7200 & 7300 w/o coulter | ACCR1345 ACCR1360 BA1345 BA1360 Note: If drive shaft is under planter frame, floating row cleaners will require SG-01 shaft guard B1332/772 B1532/772 | UMO-150 with UMO-MTJ mount BA/UMO1345 BA/UMO1360 BA/DUMO1345 BA/DUMO1360 | BSCW1343 BSCW1543 800711-72 | DCK-01 |
| 7200 & 7300 with unit mounted no-till coulter | BDC1360 | Will not work with coulter | BSCW1343 BSCW1543 800711-72 | DCK-01 |

KINZE

If planter has pneumatic down pressure, USB-7AB bracket is required with USB-70

| Planter Model | Row Cleaner & Mount | Fertilizer Opener | Closing Wheels | 2nd Stage Closing |
|---|---|---|---|---|
| 2000 & 3000 Series w/o Coulters | ACCR1345 ACCR1360 BA1345 BA1360 B1332/772 B1532/772 | UMO/150 with UMO-MTA mount **BA/UMO1345 **BA/UMO1360 **BA/DUMO1345 **BA/DUMO1360 **USB-70 Set back bracket required on all center rows | BSCW1344 BSCW1544 BSCW1444C 800711 | 900311 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| 2000 & 3000 Series with unit mounted no-till coulters | **BKC1360 **USB-70 Set back bracket required on all center rows | Will not work with coulters | BSCW1344 BSCW1544 BSCW1444C 800711 | 900311 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| 2200 & 3200 Econo fold w/o coulters | ACCR1345 ACCR1360 BA1345 BA1360 B1332/772 B1532/772 | UMO/150 with UMO-MTA mount **BA/UMO1345 **BA/UMO1360 **BA/UMO1345 **BA/DUMO1360 **USB-70 Set back bracket required on all center rows | BSCW1344 BSCW1544 BSCW1444C 800711 | 900311 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| 2200 & 3200 Econo fold with unit mounted no-till coulters | BKC1360 | Will not work with coulters | BSCW1344 BSCW1544 BSCW1444C 800711 | 900311 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| 2500 & 3500 Series Twin Line w/o coulters | ACCR1345 ACCR1360 BA1345 BA1360 B1332/772 B1532/772 | UMO/150 with UMO-MTA mount *BA/UMO1345 *BA/UMO1360 *USB-70 Set back bracket required on 4 center rows **BA/DUMO1345 **BA/DUMO1360 **USB-70 Set back bracket required on all center rows | BSCW1344 BSCW1544 BSCW1444C 800711 | 900311 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |

| Planter Model | Row Cleaner & Mount | Fertilizer Opener | Closing Wheels | 2nd Stage Closing |
|---|--|--|---|---|
| 2500 & 3500 Series Twin Line with unit mounted no-till coulters | *BKC1360 *Will not work with pneumatic down pressure | Will not work with coulters | BSCW1344 BSCW1544 BSCW1444C 800711 | 900311 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| 2600 & 3600 Series Twin Line w/o coulters | ACCR1345 ACCR1360 BA1345 BA1360 B1332/772 B1532/772 | UMO/150 with UMO-MTA mount **BA/UMO1345 **BA/UMO1360 **BA/DUMO1345 **BA/DUMO1360 **Will not work with frame mounted fertilizer openers | BSCW1344 BSCW1544 BSCW1444C 800711 | 900311 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| 2600 & 3600 Series Twin Line with unit mounted no-till coulters | *BKC1360 *Will not work with pneumatic down pressure | Will not work with coulters | BSCW1344 BSCW1544 BSCW1444C 800711 | 900311 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| 3700 & 3800 Series Front Fold w/o coulters | ACCR1345 ACCR1360 BA1345 BA1360 B1332/772 B1532/772 | UMO/150 with UMO-MTA mount **BA/UMO1345 **BA/UMO1360 **BA/DUMO1345 **BA/DUMO1360 **Will not work with frame mounted fertilizer openers | BSCW1344 BSCW1544 BSCW1444C 800711 | 900311 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| 3700 & 3800 Series Front Fold with unit mounted coulters | **BKC1360 **Will not work with frame mounted fertilizer openers | Will not work with coulters | BSCW1344 BSCW1544 BSCW1444C 800711 | 900311 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| 4900 w/o no-till coulters | ACCR1345 ACCR1360 BA1345 BA1360 *B1332/772 *B1532/772 *Will not work with pneumatic down pressure | UMO/150 with MT1360K4U-mount **BA/UMO1345 **BA/UMO1360 **BA/DUMO1345 **BA/DUMO1360 **Will not work with frame mounted fertilizer openers | BSCW1344 BSCW1544 BSCW1444C 800711 | 900311 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| 4900 with unit mounted coulters | **BK4C1360 **Will not work with frame mounted fertilizer openers | Will not work with coulters | BSCW1344 BSCW1544 BSCW1444C 800711 | 900311 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |

WHITE

| Planter Model | Row Cleaner & Mount | Fertilizer Opener | Closing Wheels | 2nd Stage Closing |
|--|---|---|---|-------------------|
| 5100 Series | B1332/512 B1532/512 | Will not work | BSCW51 | Does not apply |
| 6000 Series w/standard down pressure w/o coulter Early model | ACCR1345 ACCR1360 *BA1345 *BA1360 *Note: Will not work if drive shaft is under frame B1332/772 B1532/772 | UMO-150 with UMO-MTA mount *BA/UMO1345 *BA/UMO1360 *BA/DUMO1345 *BA/DUMO1360 *Note: Will not work if drive shaft is under frame | Double V system uses BSCW1344 BSCW1544 BSCW1444C 800711 ***Single tire uses BSCW61 ***Note: Will not work with recessed H bracket | DCK01 |
| 6000 Series w/standard down pressure with unit mounted no-till coulter Early model | *C125R *Note: Will not work if drive shaft is under frame | Will not work with coulter | Double V system uses BSCW1344 BSCW1544 BSCW1444C 800711 ***Single tire uses BSCW61 ***Note: Will not work with recessed H bracket | DCK01 |
| 6000 Series w/heavy duty down pressure w/o coulter Early model | ACCR1345 ACCR1360 *BA1345 *BA1360 *Note: Will not work if drive shaft is under frame B1332/610 B1532/610 | UMO-150 with UMO-MTA mount *BA/UMO1345 *BA/UMO1360 *BA/DUMO1345 *BA/DUMO1360 *Note: Will not work if drive shaft is under frame | Double V system uses BSCW1344 BSCW1544 BSCW1444C 800711 ***Single tire uses BSCW61 ***Note: Will not work with recessed H bracket | DCK01 |
| 6000 Series w/heavy duty down pressure w/unit mounted no-till coulter Early model | *C125R *Note: Will not work if drive shaft is under frame | Will not work with coulter | Double V system uses BSCW1344 BSCW1544 BSCW1444C 800711 ***Single tire uses BSCW61 ***Note: Will not work with recessed H bracket | DCK01 |

WHITE

| Planter Model | Row Cleaner & Mount | Fertilizer Opener | Closing Wheels | 2nd Stage Closing |
|--|--|---|--|--|
| Late 6000 & 8000 Series w/o coulters | ACCR1345 ACCR1360 *BA1345 *BA1360 *Will not work if drive shaft is under frame **B1332/810 **B1532/810 **Will not work with pneumatic down pressure | UMO-150 with UMO-MTW mount *BA/UMO1345 *BA/UMO1360 *BA/DUMO1345 *BA/DUMO1360 *Will not work if drive shaft is under frame | Double V system uses BSCW1344 BSCW1544 BSCW1444C 800711 ***Single tire uses BSCW61 ***Will not work with recessed H bracket | DCK01 |
| Late 6000 & 8000 Series w/unit mounted no-till coulters | *C125 Requires C125MTR-81 mount *Note: Will not work if drive shaft is under frame | Will not work with coulters | Double V system uses BSCW1344 BSCW1544 BSCW1444C 800711 ***Single tire uses BSCW61 ***Will not work with recessed H bracket | DCK01 |
| 9800 w/out coulters | ACCR1345 ACCR1360 *BA1345 *BA1360 *Will not work if drive shaft is under frame **B1332/772 **B1532/772 **Will not work with pneumatic down pressure | UMO-150 requires UMO-MTJ *BA/UMO1345 *BA/UMO1360 *BA/DUMO1345 *BA/DUMO1360 *Will not work if drive shaft is under frame | BSCW1344 BSCW1544 BSCW1444C 800711 | 900311 Requires 800666 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |
| 9800 w/unit mounted coulters | C125R-XP | Will not work with coulters | BSCW1344 BSCW1544 BSCW1444C 800711 | 900311 Requires 800666 Optional Press Wheels 800419 6X12 Rubber 800451 4X 12 Rubber 900397 4X12 fCrumbler |

CASE IH

| Planter Model | Row Cleaner & Mount | Fertilizer Opener | Closing Wheels | 2nd Stage Closing |
|------------------|--|--|--------------------|-------------------|
| 800 & 900 Series | *BCIH 1345 *BCIH1360 *Will not work if drive shaft is under frame B1334/892 | N/A | BSCW899 BSCW9ZC | Does not apply |
| 1200 Series | ACCR1345-1200 ACCR1360-1200 *BCIH1345 *BCIH1360 *Will not work if drive shaft is under frame **B1334/1250 **Will not work with pneumatic down pressure | UMO-150 With MT1360CU mount *BCIH/UMO1345 *BCIH/UMO1360 *BCIH/DUMO1345 *BCIH/DUMO1360 *Will not work if drive shaft is under frame | BSCW899 BSCW9ZC | Does not apply |
| 2000 Series | ACCR1345 ACCR1360 BA1345 BA1360 Requires CNH 48054385 Adapter **B1334/1250 **Will not work with pneumatic down pressure | UMO-150 With MT1360CU mount BCIH/UMO1345 BCIH/UMO1360 BA/DUMO1345 BA/DUMO1360 Requires CNH 48054385 Adapter Or MTCNHD | BSCW899 BSCW9ZC | 900252 |